HUSHÅLLA FRAMTID





4

Table of contents			
Safety information	4	Technical data	19
Product description	8	Installation	20
Control panel	10	Electrical connection	21
Daily use	10	Electrical connection for Australia	22
Cleaning and maintenance	16	Environmental concerns	23
What to do if	18	IKEA GUARANTEE	24

Safety Information



Read carefully and keep for future reference.

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.

This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

Failure to observe these instructions may lead to risks. The Manufacturer declines any liability for injury to persons or animals or damage to property if these advices and precautions are not respected.

Very young (0-3 years) and young children (3-8 years) shall be kept away unless continuously supervised.

Childern from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe appliance use and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by childern without supervision.

warning! The appliance and its accessible parts may become hot during use.
Care should be taken to avoid touching heating elements.
Young childern should be kept away.

During and after use, do not touch the heating elements or interior surface of the appliance - risk of burns. Do not allow the appliance to come in contact with cloths or other flammable materials until all the components have cooled down completely. Do not heat or use flammable materials in or near the oven. Fumes can create a fire hazard

or explosion.

Do not remove the microwave inlet protection plates located on the side of the oven cavity walls.

WARNING!: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

The appliance is designed solely for domestic use for cooking food.

This appliance is intended to be used built-in. Do not use it freestanding.

This appliance is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

CAUTION: The appliance is not intended to be operated by means of an external timer or separate remote control system. Do not use the appliance outdoors.

Do not store explosive or flammable substances such as aerosol cans and do not place or use gasoline or other flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.

Children should not perform installation operations. Keep children away during installation of the appliance. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, during and after the installation of the appliance.

Use protective gloves to perform all unpacking and installation operations.

The appliance must be handled and installed by two or more persons.

WARNING: Do not use extension leads, multiple sockets or adapters. Do not connect the appliance to a socket which can be operated by remote control.

WARNING: The power cable must be long enough for connecting the appliance, once fitted in its housing, to the main power supply.

The appliance can be operated only if the door is firmly closed. Overheated oils and fats catch fire easily. Always remain vigilant

when cooking foods rich in fat, oil or alcohol (e.g. rum, cognac, wine).

Do not leave the appliance unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some platics can melt if used when heating foods. The appliance should not be operated without food in the cavity when using microwaves. Operation in this manner is likely to damage the appliance. To ovid damage put a glass of water inside. The water will absorb the microwave energy and the appliance will not be damaged.

Never leave the appliance unattended during food drying. Do not use the appliance for drying textiles, paper, spices, herbs, woods, flowers, fruit or other combustible materials. Fire could occur.

WARNING: Do not heat or cook with sealed jars or containers in the appliance.

The pressure that builds up inside might cause them to explode, damaging the appliance.

WARNING: If the appliance is

operated in the combination mode, children should only use the appliance under adult supervision due to the temperatures generated. Do not use the appliance for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended. If alcoholic beverages are used when cooking foods (e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapours released by the alcohol catch fire if coming in contact with the electrical heating element.

Use oven gloves to remove pans and accessories, taking care not to touch the heating elements.

If material inside/outside the appliance should ignite or smoke is observed, keep the appliance door closed and turn off the appliance. Disconnect the power cord or shut off power at the fuse or circuit braker panel.

Remove wire twist-ties from paper or plastic bags before palcing bag in the oven.

Do not use the appliance for

deep-frying, because the oil temperature cannot be controlled.

WARNING: Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

- 1. Avoid using straight-sided containers with narrow necks.
- 2. Stir the liquid before placing the container in the appliance and let the teaspoon remain in the container.
- 3. After heating, allow standing for a short time, stirring again before carefully removing the container from the appliance.


WARNING: After heating baby food of liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.

warning: Do not remove any cover. The door seals and the door seals areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it have been repaired by a qualified technician.


WARNING: Never use steam cleaning equipment.

WARNING: Do not use harsh abrasive cleaners or sharp metal scrapers to clean the appliance door glass since they can scratch the surface, which may result in shattering of the glass.


Product description

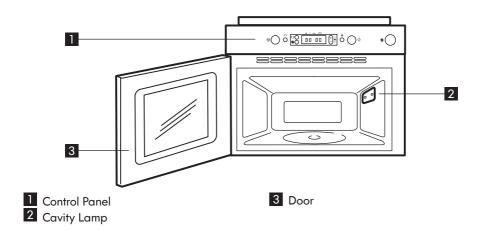

Accessories

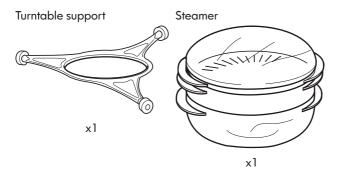

Glass turntable

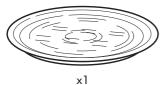

Accessories

General

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven. This is especially important with accessories made of metal or metal parts.

If accessories containing metal comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

Always ensure that the turntable is able to turn freely before starting the oven.

Turntable support

Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.

- Fit the turntable support in the oven.

Glass turntable

Use the Glass turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.


- Place the Glass turntable on the turntable support.

Steamer

Use the steamer with the strainer in place for such foods as fish, vegetables and potatoes.

Always place the steamer on the Glass Turntable.

Control panel

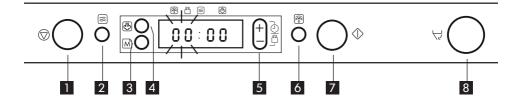

- 1 Stop button
- 2 Power button
- 3 Memo button
- 4 Steam button
- 5 + /- button

(use this button to set time or weight)

- 6 Jet Defrost button
- 7 Start button
- Door button
 (use this button to open the door)

Daily use

Start protection / Key lock

This automatic safety function is activated one minute after the oven has returned to "stand by mode". (The oven is in "stand by" when the 24-hour clock is displayed or if the clock has not been set, when the display is blank).

The door must be opened and closed e.g. putting food into it, before the safety lock is released. Else the display will show "DOOR".

To pause or stop cooking

To pause cooking:

The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 10 minutes. To continue cooking:

Close the door and press the Start button ONCE. The cooking is resumed from where it was paused.

Pressing the Start button TWICE will increase the time by 30 seconds.

If you don't want to continue cooking: Remove the food, close the door and press the Stop button A beep will signal once a minute for 10 minutes when the cooking is finished. Press the Stop button or open the door to cancel the signal.


NOTE: The oven will only hold the settings for 60 seconds if the door is opened and then closed after the cooking is finished.

Cooling down

When a function is finished, the oven carries out a cooling procedure. This is normal. After this procedure the oven switches off automatically.

Kitchen timer

Use this function when you need a kitchen timer to measure exact time for various purposes such as cooking eggs or letting the dough rise before baking etc.

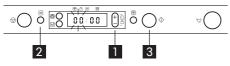


- Press the +/- buttons to set the desired length of the timer.
- Press the power button repeatedly to set the power to 0 W.
- 3. Press the Start button.

An acoustic signal will be heard when the timer has finished to count down.

Clock

Keep the door open while setting the Clock. This gives you 5 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 60 seconds.

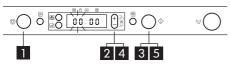

- Press the Stop button (3 seconds) until the left-hand digit (hour's) flicker.
- 2. Press the +/- buttons to set the hours.
- 3. Press the Start button. (The two right hand digits (minutes) blink).
- 4. Press the +/- buttons to set the minutes.
- 5. Press the Start button again.


The Clock is set and in operation.

NOTE: When the appliance is first plugged in or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set. If you wish to remove the Clock from the display once it has been set, simply press the Stop button again for 3 seconds and then press the Stop button once more. To reinstate the Clock, follow the above procedure.

Cook and reheat with microwaves



Use this function for normal cooking and reheating, such as vegetables, fish, potatoes and meat.

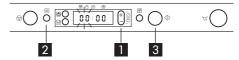

- 1. Press the +/- buttons to set the time.
- 2. Press the power button repeatedly to set the power.
- 3. Press the Start button.

Once the cooking process has been started: The time can easily be increased in 30-second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time.

Pressing the power button may also change the power level. The first press will show you the current power level. Press the power button repeatedly to change power level. All settings can be changed during cooking if you so desire.

Power level

Microwaves only		
Power	Suggested use:	
750 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. Cooking of fish, vegetables, meat etc.	
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.	
350 W	Simmering stews, melting butter.	
160 W	Defrosting. Softening butter, cheeses. Softening Ice cream.	
0 W	When using the Timer only.	

Jet start (1)



This function is used for quick reheating of foods with a high water content such as; clear soups, coffee or tea.

Press to automatically start with full microwave power level and the cooking time set to 30 seconds. Each additional press increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time after the function has started.

Manual defrost



Follow the procedure for "How to cook & reheat with microwaves" and choose power level 160 W when defrosting manually. Check and inspect the food regularly. Experience will give you the times needed for various amounts.

Frozen food in plastic bags, plastic films or cardboard packages can be placed directly in the oven as long as the package has no metal parts (e.g. metal twist ties).

The shape of the package alters the defrosting time. Shallow packets defrost more quickly than a deep block. Separate pieces as they begin to defrost. Individual slices defrost more easily. Shield areas of food with small pieces of aluminum foil if they start to become warm

(e.g. chicken legs and wing tips). Turn large joints halfway through the defrosting process.


Boiled food, stews and meat sauces defrost better if stirred during defrosting time. When defrosting it is better to under-thaw the food slightly and allow the process to finish during standing time.

Standing time after defrosting always improves the result since the temperature will then be evenly distributed throughout the food.

Jet defrost

Use this function for defrosting Meat, Fish & Poultry ONLY.

Jet Defrost should only be used if the net weight is between 100 - 2Kg.

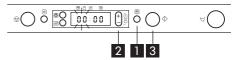

- 1. Press the Jet Defrost button.
- 2. Press the + / buttons to set the weight of the food.
- 3. Press the Start button.

Midway through the defrosting process the oven stops and prompts you to TURN FOOD.

- Open the door.
- Turn the food.
- Close the door and restart by pressing the Start button

NOTE: The oven continues automatically after 2 min. if the food hasn't been turned. The defrosting time will be longer in this case.

This function needs to know the net weight of the food. The oven will then automatically calculate the needed time to finish the procedure.

- Frozen foods:


If the food is warmer than deep-freeze temperature (-18°C), choose lower weight of the food.

If the food is colder than deep-freeze temperature (-18°C), choose higher weight of the food.

Food	Hints
Meat (100 g - 2.0 Kg)	Minced meat, cutlets, steaks or roasts.
Poultry (100 g - 2.0 Kg)	Chicken whole, pieces or fillets.
Fish (100 g - 1.5 Kg)	Whole, steaks or fillets.

For food not listed in this table and if the weight is lesser or greater than recommended weight, you should follow the procedure for "Cook and reheat with microwaves" and choose 160 W when defrosting.

Memory M

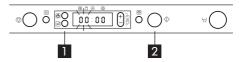

The Memory function provides you with an easy way to quickly recall a preferred setting.

The principle of the Memory function is to store whatever setting that is currently displayed.


- 1. Press the Memo button.
- 2. Press the Start button.

How to store a setting:

- Select any function and make the nesseccary settings
- 2. Make the necessary settings
- Press and keep the Memo button pressed for 3 seconds until an acoustic signal is heard. The setting is now stored. You may reprogram the memory as many times as you wish.

When the appliance is plugged in or after a power failure, your Memo function will have stored - 1 minutes and 750 W as default setting.



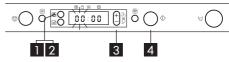

Use this function for such food as vegetables & fish

Always use the supplied Steamer when using this function.

- 1. Press the Steam button.
- 2. Continue to repeatedly press the Steam button to set the food class.
- Press the +/- buttons to set the weight of the food.
- 4. Press the Start button.

Place the food on the steam grid.



Add 100 ml (1dl) water in the bottom part of the steamer.



Cover with the lid.





WARNING! The Steamer is designed to be used with microwaves only!

Never use it with any other function at all. Using the steamer in any other function may cause damage.

Always ensure that the turntable is able to turn freely before starting the oven.
Always place the steamer on the Glass Turntable.

Cooking vegetables

Place the vegetables into the strainer.
Pour 100 ml water into the bottom part.
Cover with the lid and set the time.
Soft vegetables such as broccoli and leek require 2-3 minutes cooking time.
Harder vegetables such as carrots and potatoes require 4-5 minutes cooking time.

Food	Hints
Potatoes / Root vetables (150 g - 200 g)	Use even sizes. Cut the vetgetables into even pieces. Allow to stand for 1 - 2
Vegetables (Cauliflower and Broccoli) (150 g - 500 g)	minutes, after cooking.
Frozen vegetables (150 g - 500 g)	Allow to stand for 1 - 2 minutes after cooking.
Fish filets (150 g - 500 g)	Distribute fillets evenly on the steamgrid. Interlace thin parts. Allow to stand for 1 - 2 minutes, after cooking.

WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Young childern should be kept away.

During and after use, do not touch the heating elements or interior surface of the appliance - risk of burns. Do not allow the appliance to come in contact with cloths or other flammable materials until all the components have cooled down completely.

WARNING: Do not heat or cook with sealed jars or containers in the appliance. The pressure that builds up inside might cause them to explode, damaging the appliance.

WARING: If the appliance is operated in the combination mode, children should only use the appliance under adult supervision due to the temperatures generated.

WARNING: Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden

boil over of the hot liquid. To prevent this possibility the following steps should be taken:

- 1. Avoid using straight-sided containers with narrow necks.
- 2. Stir the liquid before placing the container in the appliance and let the teaspoon remain in the container.
- 3. After heating, allow standing for a short time, stirring again before carefully removing the container from the appliance.

WARNING: After heating baby food of liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.

Cleaning and maintenance

Cleaning is the only maintenance normally required.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

IMPORTANT: do not use metal scouring pads, abrasive cleansers, steel-wool pads, gritty washcloths, etc. which can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

Do not spray directly on the oven.

At regular intervals, especially if spill overs have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

important: do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

(i) IMPORTANT: do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

important: do not use steam cleaning appliances when cleaning your microwave oven.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the cavity ceiling near it may need regular cleaning. This should be done with warm water, detergent and a sponge. If the Grill is not used regularly, it should be run for 10 minutes a month to burn off any splashes.

Dishwasher safe

- Turntable support.
- Glass turntable.
- · Crisp handle.

Careful cleaning

The Crisp-plate should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser.

Always let the crisp-plate cool off before cleaning.

IMPORTANT: do not immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

important: do not use steel-wool pads. This will scratch the surface.

During and after use, do not touch the heating elements or interior surface of the appliance - risk of burns. Do not allow the appliance to come in contact with cloths or other flammable materials until all the components have cooled down completely. The appliance must be disconnected from the power supply before carrying out any cleaning or maintenance operation. Use protective gloves for cleaning and maintenace operations.

Ensure the appliance is cooled down before carrying out any cleaning or mainteinance operation.

WARNING: Do not remove any cover. The door seals and the door seals areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it have been repaired by a qualified technician.

WARNING: Never use steam cleaning equipment.

WARNING: Do not use harsh abrasive cleaners or sharp metal scrapers to clean the appliance door glass since they can scratch the surface, which may result in shattering of the glass.

What to do if ...

Problem	Possible cause	Solution
The appliance does not work.	The mains power supply or the appliance is not connected.	Check your fuses and ensure that there is power avaliable.
	The door isn't closed.	Open and then close the door before you try again.
A message is displayed such as: F2, F3C, F7 or Err2, Err3, Err5.	The oven has recognized that a fault has occured in one of it's sensors or similar.	Disconnect and wait 10 minutes before reconnecting, then try to operate the oven once more. If the problem persists: call service.
The food is unevenly heated.	Very thin parts such as chicken wingtips and such are not shielded.	Shield the thinner parts with aluminum foil.
	The food was heated at a power level too high.	Choose a lower power level.
	The turntable has stopped.	Check that the turntable and turntable support is in place and the food is well centered, not touching the cavity walls.
Food isn't turning.	The turntable has stopped.	Check that the turntable and turntable support is in place and the cavity bottom is clean.

Authorized Service Centre

Before calling the Authorized Service Centre:

- 1. See if you can solve the problem on your own (see the "What to do if ..." table).
- 2. Switch the appliance off and on again to see if the problem has disappeared. If the fault persists after the above checks, contact IKEA Authorized Service Centre. Always specify:
- the type of fault;
- exact type and model of appliance;
- the Authorized Service Centre number (the number given after the word "Service" on the rating plate) located on the inside edge of the oven cavity (visible when the door is open);




- your full address;
- your telephone number.

If any repairs are required, please contact IKEA Authorized Service Centre (to guarantee that original spare parts will be used and repairs carried out correctly).

Technical data			
Supply Voltage	230 V/50 Hz		
Rated Power Input	1300 W		
Fuse	10 A (UK 13 A)		
MW output power	750 W		
Outer dimensions (HxWxD)	348 X 595 X 320		
Cavity inner dimensions (HxWxD)	187 X 370 X 290		

The technical informations are situated in the rating plate inside the appliance.

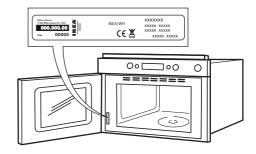

Data for test heating performance in accordance with IEC 60705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	750 g	10 min	750 W	Pyrex 3.227
12.3.2	475 g	5 ½ min	750 W	Pyrex 3.827
12.3.3	900 g	14 min	750 W	Pyrex 3.838
13.3	500 g	2 min 40 sec	Jet Defrost	

NOTE: this information is only for the qualified technician.

Installation

Mounting the appliance

Follow the supplied separate mounting instructions when installing the appliance. Children should not perform installation operations. Keep children away during installation of the appliance. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, during and after the installation of the appliance.

Use protective gloves to perform all unpacking and installation operations. The appliance must be handled and installed by two or more persons. The appliance must be disconnected from the power supply before carrying out any installation operation.

After unpacking the appliance, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service.


After unpacking the appliance, make sure that the appliance door closes properly. In the event of problems, contact the dealer or your nearest After-sales Service. To prevent any damage, only remove the oven from its polystyrene foam base at the time of installation.

During installation, make sure the appliance does not damage the power cable.

Electrical connection

Prior to connecting

Check that the voltage on the rating plate corresponds to the voltage in your home. The rating plate is on the front edge of the oven (visible when the door is open). Do not remove the microwave inlet protection plates located on the side of the oven cavity walls. They prevent grease and food particles from entering the microwave inlet channels.

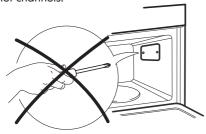

Ensure the oven cavity is empty before mounting.

Ensure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth. Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

After connecting

The oven can be operated only if the oven door is firmly closed.

Regulation require that the appliance is earthed.

The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

The manufacturers are not liable for any problems caused by the user's failure to observe these instructions.

Failure to observe these instructions may lead to risks. The Manufacturer declines any liability for injury to persons or animals or damage to property if these advices and precautions are not respected.

CAUTION: The appliance is not intended to be operated by means of an external timer or separate remote control system.

After installation, the electrical components must not be accessible to the user.

For installation to comply with current safety regulations, an omnipolar switch with minimum contact gap of 3mm is required.

WARNING: The power cable must be long enough for connecting the appliance, once fitted in its housing, to the main power supply.

Do not pull the power supply cable. If the power cable is damaged it must be replaced with an identical one. The power cable must only be replaced by a qualified technician in compliance with the manufacturer instruction and current safety regulations. Contact an authorized service center.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.

Do not touch the appliance with any wet part of the body and do not operate it when barefoot.

For appliances with fitted plug, if the plug is not suitable for you socket outlet, contact a aualified technician.


Do not use extension leads, multiple sockets or adapters. Do not connect the appliance to a socket which can be operated by remote control.

Electrical connection for Australia

Power Cord and Plug: Declared Article – Mandatory Approval Applies:

Current Australian Approval Certificates will need to be forwarded, showing compliance with applicable Australian Standards, as noted below. Plug to have insulated pins. Plug and Cord to have approval marking, as required by the relevant Approval Certificate

- \cdot AS/NZS 3112: 2004 with Amendment 1, for Plug
- · AS 3191: 2008, for Cord, or; · 'HAR' Certification, for Cord

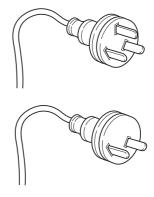

Environmental concerns

The packaging material is 100% recyclable and is marked with the recycle symbol (﴿﴿). The various parts of the packaging must therefore be disposed of responsibility and in full compliance with local authority regulations governing waste disposal. This appliance is manufactured with recyclable (﴿) or reusable materials. Dispose of it in accordance with local waste disposal regulations.

This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

Declaration of conformity (E

This appliance, which is intended to come - into contact with foodstuffs, complies with European Regulation (**€**) n. 1935/2004 and has been designed, manufactured and sold in conformity with the safety requirements of the "Low Voltage" directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments), the protection requirements of "EMC" 2004/108/CE.

The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchase the appliance. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

IKEA GUARANTEE

How long is the IKEA guarantee valid?

This guarantee is valid for five (5) years from the original date of purchase of your appliance at IKEA Pty Ltd,

ABN 84 006 270 757 or at Cebas Pty Ltd, ABN 15 009 156 003, unless the appliance is named LAGAN in which case two (2) years of guarantee apply. The original sales receipt, is required as proof of purchase. If service work is carried out under guarantee, this will not extend the guarantee period for the appliance.

Which appliances are not covered by the IKEA five (5) years guarantee?

The range of appliances named LAGAN.

Who will execute the service?

IKEA Authorized Service Centre will provide the service through its own service operations or Authorized Service Centre network.

Contact IKEA for further information.

 If you encounter any trouble with the appliance and wish to register a service call or make a claim, please refer to ww.ikea.com.au for your local store after sales customer service center phone number, online email and opening times or refer to the phone numbers shown below.

The principal address and contact details in Australia are:

IKEA Authorized Service Centre at **www.IKEA.com.au** or

 For Queensland, New South Wales and Victorian customers please contact:

IKEA Pty Ltd

IKEA Service Office L1 Clock Tower, 630 Princes Highway Tempe, NSW 2044

 Victoria:
 (03) 8523 2154

 New South Wales:
 (02) 8020 6641

 Queensland:
 (07) 3380 6800

 IKEA Perth:
 (08) 9201 4532

 IKEA Adelaide:
 (08) 8154 4532

 For Western Australian and South Australian cutomers please contact:

Cebas Pty Ltd

8c Sunray Drive, Innaloo WA 6018 Australian

IKEA Perth: (08) 9201 4532 IKEA Adelaide: (08) 8154 4532

What does this guarantee cover?

The guarantee covers applicable faults of the appliance, which have been caused by faulty construction or material faults from the date of purchase from IKEA. This augrantee applies to domestic use only. The products have been designed and tested for domestic purposes only and this guarantee does not cover damage arising from use of the Product in a commercial environment. The exceptions are specified under the headline "What is not covered under this guarantee?" Within the guarantee period, the costs to remedy the fault e.g. repairs, parts, labour and travel will be covered. provided that the appliance is accessible for repair without special expenditure. Replaced parts become the property of IKEA.

The guarantee exists only if the appliance complies and is installed in accordance with:

- The technical specifications.
- The Assembly Instructions and user manual Safety Information.

IKEA's guarantee is subject to Australian Consumer Law - see Schedule 2 to Competition and Consumer Act, 2010. This guarantee is in addition to (and does not exclude, restrict or modify in any way) any non-excludable statutory warranties in Australia.

What will IKEA do to correct the problem?

IKEA appointed service provider will examine the product and decide, at its sole discretion, if it is covered under this guarantee. If considered covered, IKEA service provider or its authorized service partner through its own service operations, will then, at its sole discretion, either repair

the defective product or replace it with the same or a comparable product.

What is not covered under this guarantee?

- Normal wear and tear.
- Deliberate or negligent damage, damage caused by failure to observe operating and maintenance instructions, incorrect installation or by connection to the wrong voltage, damage caused by chemical or electrochemical reaction, rust, abrasion or scratching, corrosion or water damage including but not limited to damage caused by excessive lime in the water supply, damage caused by abnormal environmental conditions.
- Damage caused from the use of the appliance in a manner other than the use for which it was specifically designed.
- Damage caused by power outages, electrical power surge or improper supply voltage via connection to Supply Authority mains or alternative supply systems.
- Consumable parts including batteries and lamps, removable wire, glass and plastic trays and other accessories.
- Internal or external damage as a result of excessive use of cleaning products or cleaning agents.
- Non-functional and decorative parts which do not affect normal use of the appliance, including any scratches and possible color differences.
- Accidental damage or blockages caused by foreign objects, eg. coins, underwires, nails, buttons or jewellery, or substances and cleaning or unblocking of filters, drainage systems or soap drawers
- Damage caused by vermin, insects or pets.
- Note internal or external cabinet transport damage must be reported within 7 days of purchase date.
- Damage to the following parts: ceramic glass, accessories, crockery and cutlery baskets, feed and drainage pipes, seals, lamps and lamp covers, screens, knobs, casings and parts of casings. Unless such

- damages can be proved to have been caused by production faults.
- Cases where no fault could be found during a technician's visit.
- Any consequential loss due to appliance failure.
- Repairs not carried out by our appointed service providers and/or an authorized service contractual partner or where non original parts have been used.
- Repairs to parts or systems caused by unauthorized modifications made to appliance.
- Repairs caused by installation which is faulty or not according to specification.
- Problems caused by incorrect or inadequate venting of the appliance.
- The use of the appliance in a non domestic environment i.e. professional use.
- Transportation damages. If a customer transports the product to his home or another address, IKEA is not liable for any damage that may occur during transport.
 - However, if IKEA delivers the product to the customer's delivery address, then damage to the product that occurs during this delivery will be covered by IKEA.
- Cost for carrying out the initial installation of the IKEA appliance. However, if an IKEA appointed Authorized Service Centre or its authorized service partner repairs or replaces the appliance under the terms of this guarantee, the Authorized Service Centre or its authorized service partner will reinstall the repaired appliance or install the replacement, if necessary.
- The benefits conferred by this express warranty are in addition to all other conditions, warranties, guarantees, rights and remedies expressed or implied by the Trade Practices Act and similar State and Territory laws and all other obligations and liabilities on the part of the manufacturer or supplier and nothing contained herein shall restrict or

modify such rights, remedies, obligations or liabilities.

How country law applies?

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law (ACL).

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This guarantee is not intended in any way to limit or exclude such rights and remedies that you may have under law.

You can find out more information about the Australian Consumer Law on the ACCC website: www.accc.gov.gu

Area of validity

The IKEA guarantee applies only to products purchased and installed in AUSTRALIA

What you must do to make a claim under the guarantee

To make a claim under the guarantee contact IKEA Authorized Service Centre at the above address, the IKEA catalogue or refer to www.ikea.com.au for your local store customer service phone number, online email and opening times. Please describe the problem that you are facing with the appliance in detail along with your product article number (8 digit code) and date of purchase at the time of call registration.

Please do not hesitate to contact the dedicated Authorized Service Centre for IKEA appliances to:

- Make a service request under this augrantee.
- Ask for clarification on installation of the IKEA appliance in the dedicated IKEA kitchen furniture.
- Ask for clarification on user manual contents and specifications of the IKEA appliance.

To ensure that we provide you with the best assistance, please read carefully the Assembly Instructions and/or the User Manual section of this booklet before contacting us.

How to reach if you need our service

The IKEA Authorized Service Centre will assist you on the phone with basic trouble shooting for your appliance at the time of warranty call registration.

Please refer to the IKEA catalogue or www. ikea.com.au or to below phone numbers and select your local store .



Victoria: (03) 8523 2154
New South Wales: (02) 8020 6641
Queensland: (07) 3380 6800
IKEA Perth: (08) 9201 4532
IKEA Adelaide: (08) 8154 4532

Please describe the problem that you are facing with the appliance in detail along with your product model number, serial number, date of purchase at the time of call registration.

Please also always refer to the IKEA article number (8 digit code) and 12 digit service number placed on the rating plate of your appliance.



SAVE THE SALES RECEIPT!

Kindly keep all these details and original invoice of purchase handy during the service technician's visit to enable him to carry out the job. It is your proof of purchase and required for the guarantee to apply.

